



PREMIUM AFTERMARKET WIND DEFLECTORS



INSTALLATION INSTRUCTIONS

Ferrari California Wind Deflector 2008-2017

What's in the box

1 x wind deflector

1 x installation manual

Product No: 11.01.03.01



WARNING!

ALWAYS FOLD THE UPRIGHT PART OF THE WIND DEFLECTOR HORIZONTAL BEFORE OPENING OR CLOSING THE HARDTOP/ROOF!



PREMIUM AFTERMARKET WIND DEFLECTORS

INSTALLATION INSTRUCTIONS

STEP 1


Place the wind deflector in the car and slide the rear pins of the wind deflector into the opening of the rear seatbelt covers.









STEP 3

Unlock the side pins of the wind deflector and click the wind deflector in the factory fitted wind deflector mounts.

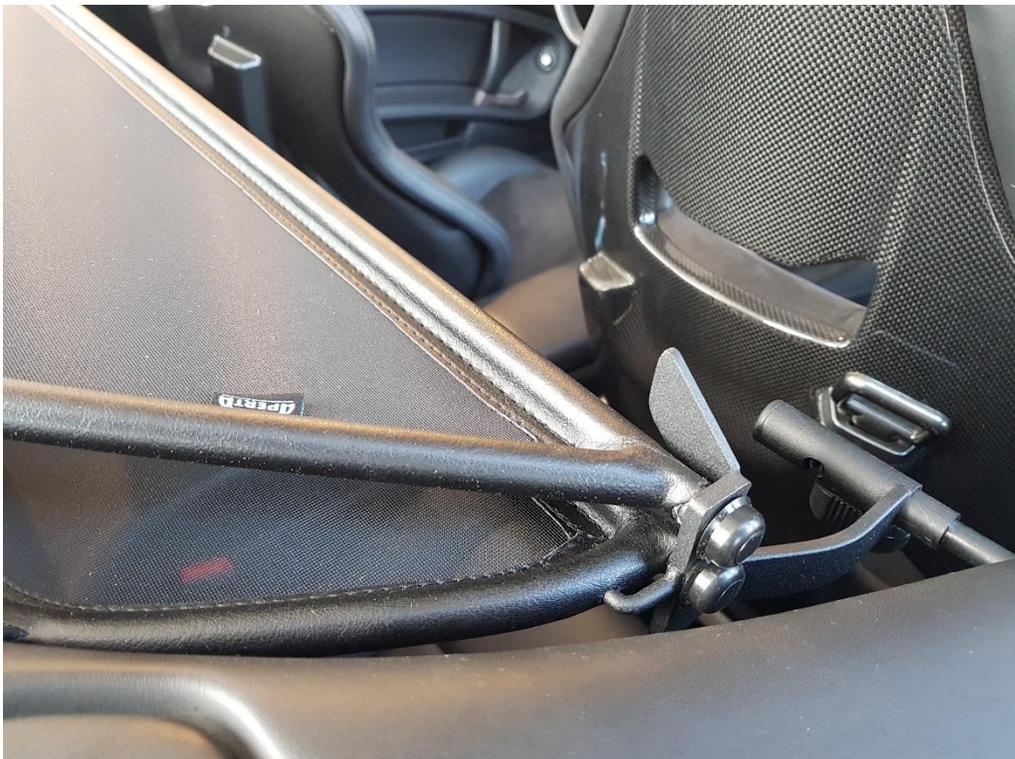

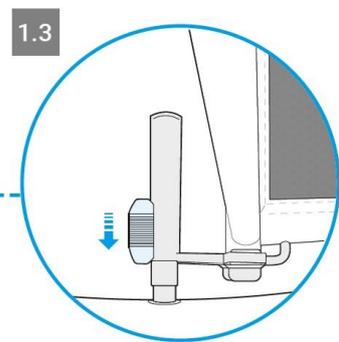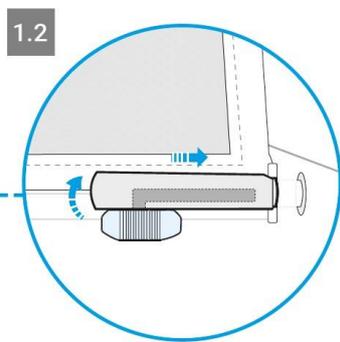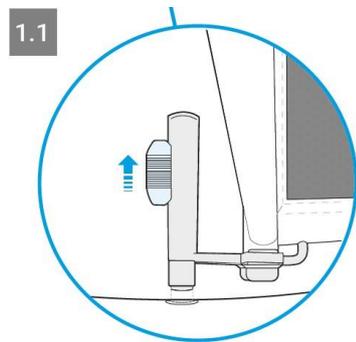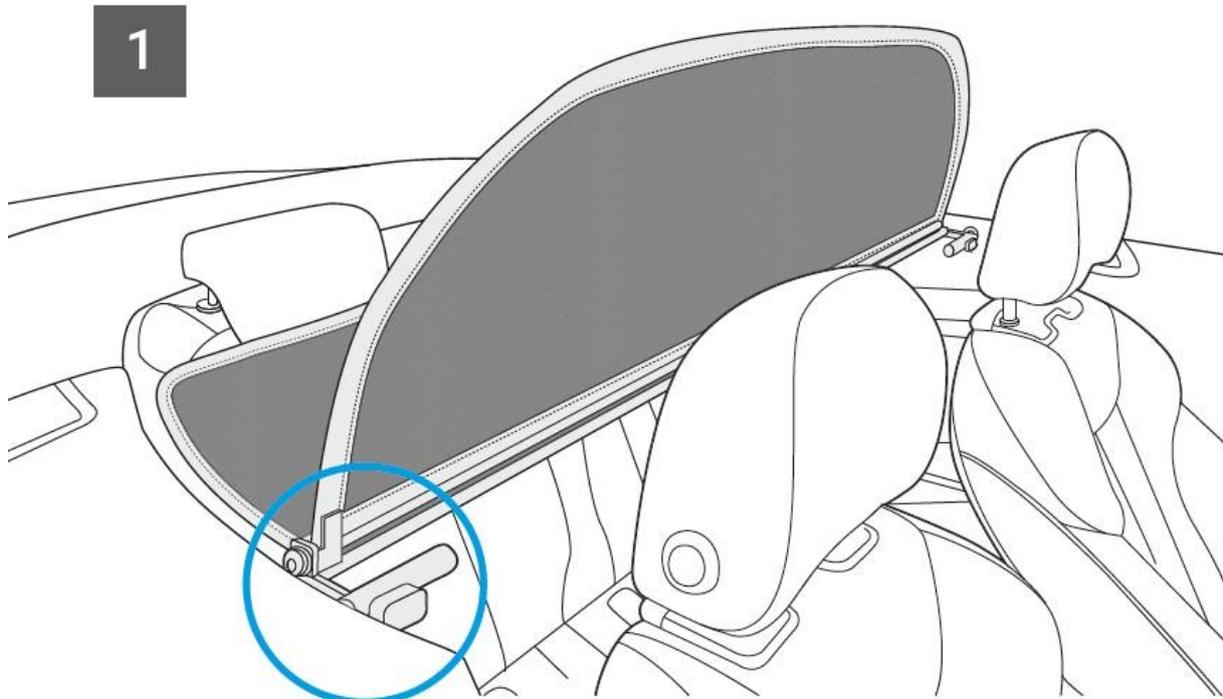

STEP 4

Go out for a drive and enjoy your APERTA wind deflector!

