



## ATLAS Premium Luggage Racks

PORSCHE 356 A B C LUGGAGE RACK

Part No: WTPOOG108

OEM Reference No: P232640



<b>GB</b> TRUNK LID CARRIER Installation instruction	<b>N</b> LASTESTATIV Monteringsveiledning
<b>D</b> GEPAECKTRAEGER Einbauanleitung	<b>S</b> LASTHÄLLARE Monteringsanvisning
<b>E</b> PORTAEQUIPAJES Instrucciones de Montaje	<b>SF</b> KUORMATELINE Asennusohje
<b>F</b> PORTE-CHARGE Notice de Montage	<b>CZ</b> NOSI, NAKLADU Navod k Montáži
<b>I</b> PORTACARICHI ESTERNO Istruzioni di Montaggio	<b>H</b> CSOMAGTARTO Beszerelési Utasítás
<b>P</b> BAGAGEIRO DE PORTA-MALAS Instruções de Montagem	<b>PL</b> BAGAZNIK POKRYWIE Instrukcja Instalowania
<b>NL</b> BAGAGEDRAGER Inbouw-Instructie	<b>GR</b> ΣΧΑΡΑ ΑΠΟΣΚΕΥΩΝ Οδηγίες Τοποθέτησης
<b>DK</b> BAGAGEBÆRER Monteringsvejledning	

Expert Fitment Required  
Montage durch Fachwerkstatt erforderlich  
Montaje sólo por el concesionario  
Montage par spécialiste nécessaire  
E' necessario in officina specializzata  
Especialista em montagem requerido  
Montage door vakman nodig  
Montage ved professionelt værksted påkrævet  
Nødvendig med montering fra fagværksted  
Verkstadsmontage erfordras  
Asennus tarpeen merkkikorjaamossa  
Montáž ve specializované dílně nutná  
A szereléshez szakműhely kell  
Konieczny montaż przez warsztat specjalistyczny  
Να τοποθετεί από συνεργείο

Sheet 1 of 7

© Copyrights ATLAS Date: 26-03 2020



**ATLAS**

## Premium Luggage Racks

- (GB)** The chromium plating of the rear luggage carrier should be regularly – or after each car wash – be treated with suitable cleaning agents.
- (D)** Die Verchromung des Heckträgers soll in regelmäßigen Abständen – oder nach jeder Autowäsche – mit geeigneten Mitteln gepflegt werden.
- (E)** El cromado del soporte trasero se tiene que conservar en intervalos regulares – o después de cada lavado del automóvil – con productos adecuados.
- (F)** L'entretien des chromes du porte-bagages arrière devra avoir lieu à intervalles réguliers - ou après chaque lavage du véhicule - au moyen de produits appropriés.
- (I)** La cromatura del portaoggetti posteriore deve essere curata a intervalli regolari – oppure dopo ogni autolavaggio – con mezzi adeguati.
- (P)** O cromado da suporte traseiro deve ser tratado com um produto apropriado em intervalos regulares ou após cada lavagem do veículo.
- (NL)** Het chroomwerk van de bagagedrager regelmatig – of na iedere keer wassen – met geschikte middelen reinigen.
- (DK)** Forkromningen på stativet skal med regelmæssige mellemrum – eller hver gang bilen har været vasket – pudses med et egnet plejemiddel.
- (N)** Forkrommingen av baggasjebæreren bak må med regelmessige mellomrom – eller også etter hver bilvask – pleies med egnete midler.
- (S)** Regelmässigt behandla kromskikten av bakre bagagehållare med lämpliga medeln – eller efter varje bilvätten.
- (SF)** Takakannattimen kromausta on hoidettava säännöllisin väliajoin – tai jokaisen auton pesun jälkeen – sopivilla aineilla.
- (CZ)** Pochromování zadního nosiče by se mělo ošetřovat v pravidelných intervalech - nebo po každém mytí auta - vhodnými prostředky.
- (H)** A hátsó tartót rendszeres időközökben - vagy minden egyes autómosás után - megfelelő anyaggal le kell kezelni.
- (PL)** Powierzchnie chromowane bagażnika tylnego należy konserwować w regularnych odstępach czasu lub każdorazowo po umyciu samochodu przy pomocy odpowiednich środków pielęgnacyjnych.
- (GR)** Η επιχρωμίωση της πίσω σχάρας οφείλει να φροντίζεται σε τακτικά διαστήματα - ή μετά από κάθε πλύσιμο του αυτοκινήτου - με κατάλληλα προϊόντα



## **ATLAS**

### **Premium Luggage Racks**

#### **What's in the box:**

- 1 x Porsche 356 luggage rack
- 4 x bolts
- 4 x washers
- 4 x support brackets
- 1 x installation manual







**ATLAS**

## Premium Luggage Racks

### STEP 1

Determine if your Porsche 356 has a single or a double air vent.

#### Single air vent



#### Double air vents



If your Porsche has a single air vent you have to use the inner holes that are in the rack.





## ATLAS Premium Luggage Racks

If your Porsche has **double air vents** you have to use the outer holes that are in the luggage rack.



### STEP 2

Screw the support brackets to holes of rack (in the for your car correct holes). The support brackets don't have to be screwed all the way through the rack just far enough that they are in line with the brace of the rack. **The support bracket should not stick out from the top of the rack mounting brackets!** You can secure the support brackets by turning the bolt that is on the brackets.







## **ATLAS** **Premium Luggage Racks**



### **STEP 3**

Use the bolts and washers to attach the luggage rack to luggage rack mounting point that is located in every Porsche 356. This mounting point is a bracket with a thread.





## **ATLAS**

### **Premium Luggage Racks**

#### **PLEASE NOTE**

**1. If your car has been repainted clean the thread of the brackets before installing the bolts. The best way to clear the thread is a tap.**




**2. Always check if the bracket and thread are in good condition before installing the rack. Not bend and rust free.**

**3. If your Porsche 356 is missing the mounting point your Porsche 356 has not been restored to original specifications.**

**4. If the thread size of your bracket does match the thread of the luggage rack bolts your Porsche 356 has not been restored to original specifications.**

**5. It's recommended to grease the bolt with copper grease to prevent the bracket in your car from rusting.**

**6. The max load capacity of the rack is 15kg.**

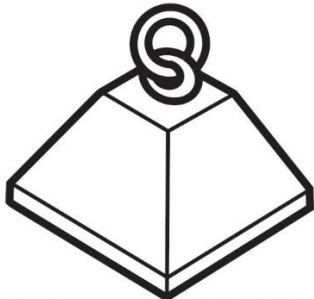

**Max. 15 Kg**